



1. A Permit to Work must be issued for "inspection and maintenance of electrical system" while implementing the LOTO procedure during such activities.

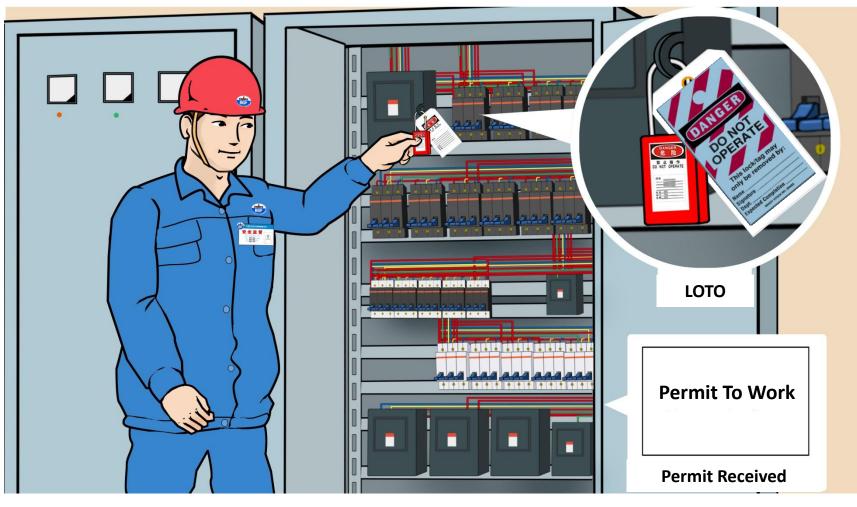




2. A Permit to Work must be issued for activities of "hot work" and "confined space entry". On-site supervision must be enforced during the entire operation.

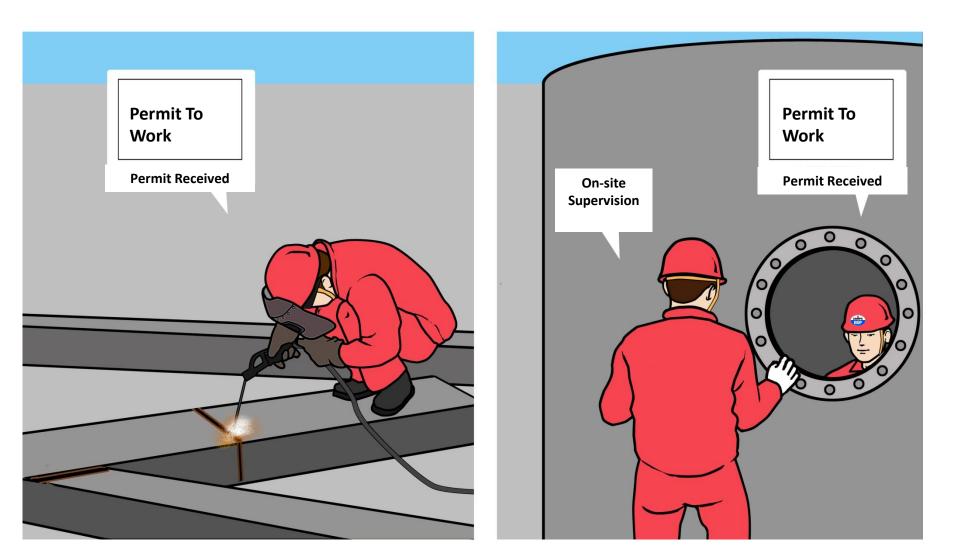




3. A Permit to Work must be issued for vehicle towing operation and Company approved additional safety chains must be used around hook up point.

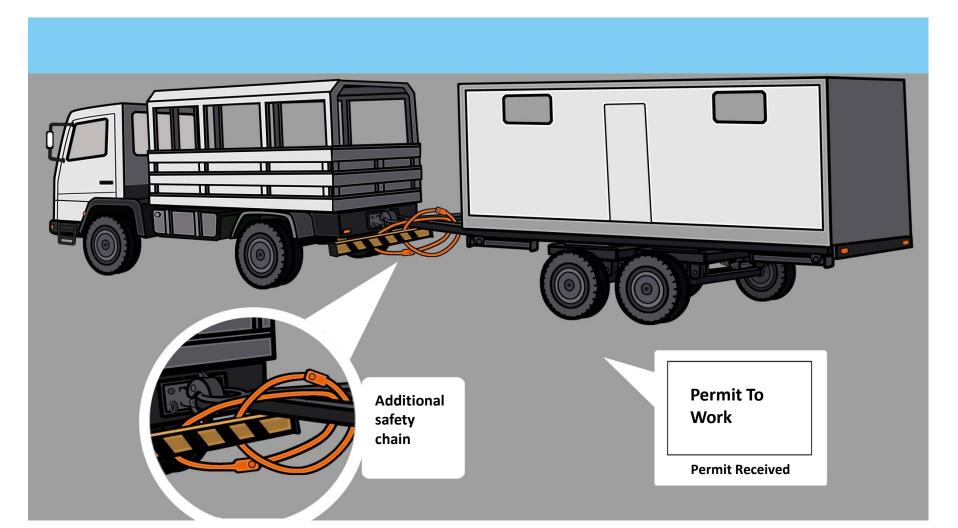




4. Drivers and passengers must wear seatbelt.

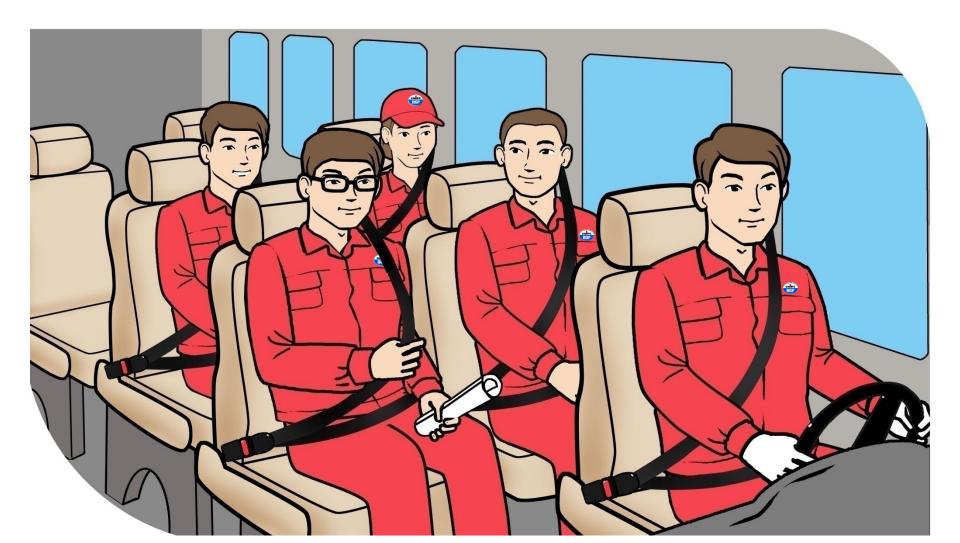




5. A Permit to Work must be issued for the inspection and maintenance of gas pipelines and boilers. On-site supervision must be enforced during the entire operation.

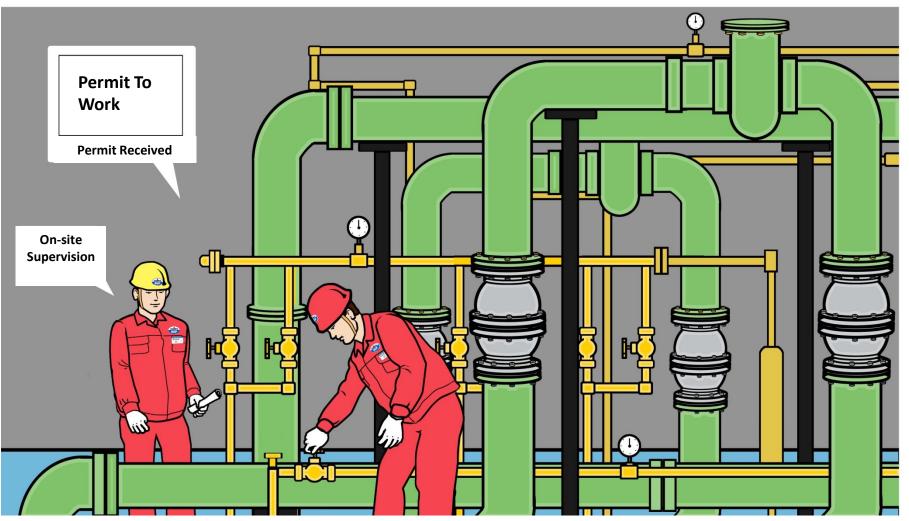




6. A Permit to Work must be issued for mobile crane operation. It is strictly forbidden to stand or walk under the boom. Never travel a load over personnel.

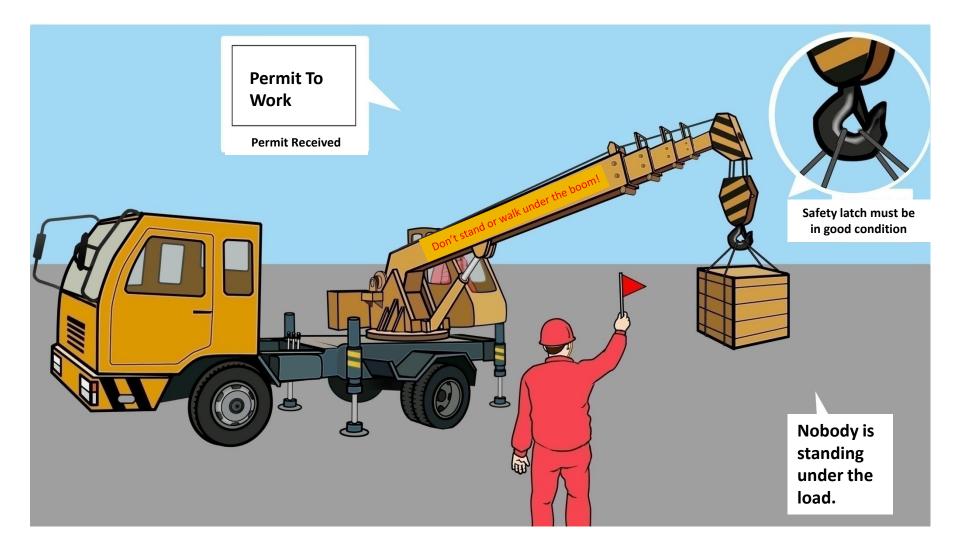




7. For marine operation, a Permit to Work must be issued to work outside the vessel's perimeter rails. All personnel deploying or retrieving cables must be properly donned with life jacket and safety hat. The ignition key for the small boat must be strapped onto the boat operator's wrist.

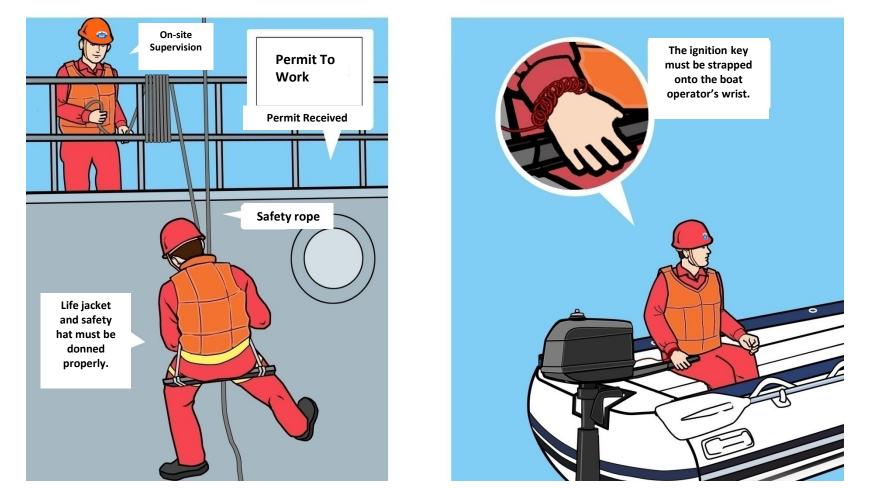




8. A valid certificate or Company approval document must be available prior to operating an unique equipment or engaging in a specialized operation.

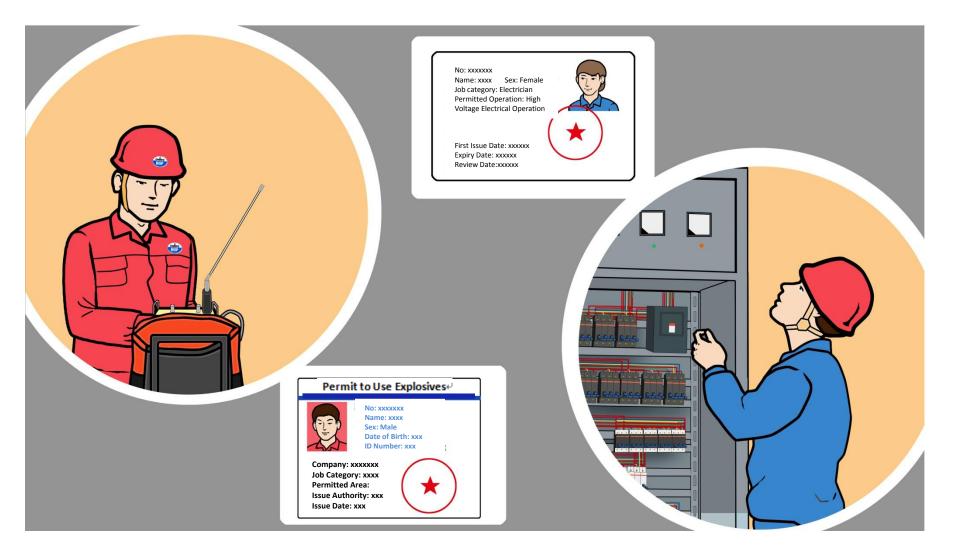



9. When preparing explosives, the operator must cap all detonator wires at all times. A safe distance must be kept during shot firing. For uphole operation, only one person shall be assigned to place the explosives, connect the detonator wires and to operate the shooting box.

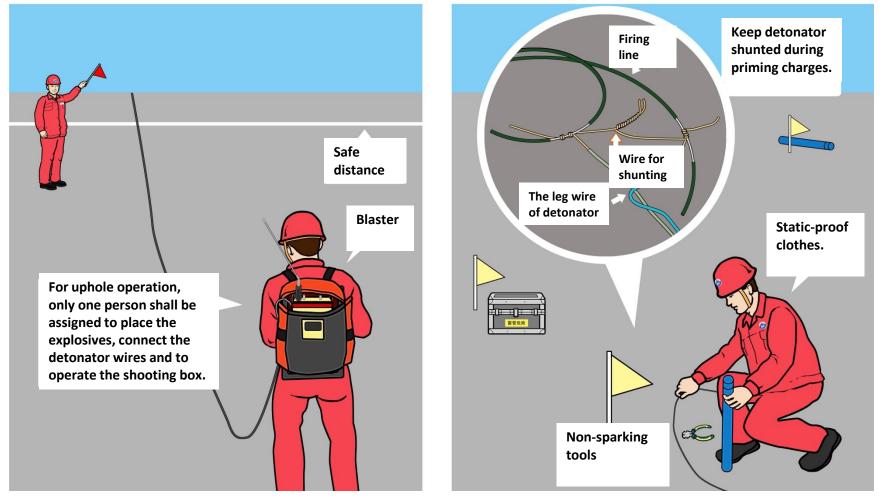



10. A Permit to Work must be issued when working at height of 2 meters or above. Personnel must wear appropriate fall-prevention harness. On-site supervision must be enforced during the operation.

